



PEUGEOT
Motorcycles

SALES DIVISION
NETWORK TECHNICAL INFORMATION



WORKSHOP MANUAL

Looxor



CONTENTS

CONTENTS

SOMMAIRE	2
TECHNICAL DATA.....	4
Machine markings	4
Technical data	4
Frame	4
Capacities.....	4
Dimensions	4
Weight.....	4
Tyres	4
Engine markings	4
SERVICE SCHEDULE AND COMMISSIONING	5
Check:	5
Change:.....	5
Check and decarbonize:.....	5
Check and grease:	5
Clean and set:.....	5
Test the machine:.....	5
Battery preparation (unless maintenance-free battery).....	6
Filling the fuel and oil systems	6
Checks before handing over to customer.....	6
SPECIAL IMPORTANT POINTS	7
Tyres:	7
To open the saddle:.....	7
Oil and fuel:	7
TIGHTENING TORQUES AND SPECIAL TOOLS.....	8
Tightening torques	8
Special tools:.....	8
BODY PANELS	9
Removal of instrument panel upper cover Operation 1	9
Removal of instrument panel cover Operation 2	9
Removal of saddle/storage compartment assembly Operation 3	10
Removal of legshield rear panel Operation 4	11
Removal of legshield front panel Operation 5	12
Removal of rear RH and LH covers	13
Operation 6	13
Removal of footboard	15
Removal of main fairings Operation 7	16
Removal of front mudguard.....	17
Removal of rear mudguard and the mud flap Operation 8	18
Removal of headlight, sidelight, and front direction indicator bulb.....	20
Removal of headlight.....	20
Removal of rear light	20
FRAME.....	21
Removal of fork Operation 9	21
Removal of fork lower and upper races.....	22
Removal of fork lower cone	22
Dismantling the fork.....	23
Removal of steering lock.....	24
Removal of rear brake hose	24

CONTENTS

MISCELLANEOUS OPERATIONS	25
Removal of handlebar.....	25
Removal of RH and LH control switch modules.....	26
Removal of throttle and oil controls.....	26
Removal of exhaust Operation 10	27
Removal of saddle opening control.....	28
Removal of fuel tank and its valve.....	29
Operation 11	29
Removal of oil tank Operation 12	29
Removal of oil pipes.....	30
Removal of fuel gauge.....	31
Removal of rear shock absorber.....	31
WORK ON THE ENGINE WITHOUT REMOVING THE ENGINE	32
Removal of magneto coil.....	32
Removal of starter motor.....	32
Removal of carburettor.....	32
Removal of cylinder and the piston.....	33
Removal of inlet manifold and valves.....	33
Removal of oil pump.....	33
Removal of engine mounting linkrod and rubber thrust bush.....	34
ELECTRICITY	35
Removal of ACI 100 ignition module (100cc).....	35
Removal of transponder antenna (100cc).....	35
Removal of high tension coil.....	35
Removal of voltage regulator.....	36
Removal of horn.....	36
Removal of lighting and choke resistors.....	36
Removal of CDI ignition module (50cc).....	36
Removal of instrument panel.....	37
Removal of speed sensor.....	37
Removal of main harness.....	38
REMOVING THE ENGINE	40
Removal of power unit.....	40
Stripping down the power unit.....	41
FRAME	42
Removal of frame.....	42
Refitting the frame.....	44